

LESSO

5kW / 10kW

Residential Off-grid Solar Energy System User Manual

Document Revision: V1.0



Contents

Overview	2
Intended Readers.....	2
Symbol Descriptions	3
1. Introduction	4
1.1 Introduction to Off-grid System	4
1.2 Features.....	4
2. Product Composition and Appearance	4
2.1 Typical Product Configuration Table for 5kW/10kWh Systems.....	4
2.2 Typical Product Configuration Table for 10kW/20kWh Systems	6
2.3 Product Wiring Schematic Description	7
3. Equipment Installation	8
3.1 Safety Requirements.....	8
3.2 Preparation for Installation.....	8
3.3 Inverter Installation	9
3.4 Battery Pack Installation	9
3.5 Distribution Box Installation	9
3.6 550W PV Module and Bracket Installation	10
4. Equipment Wiring Notes	10
4.1 Connection between PV Modules	10
4.2 PV Cable Connection	10
4.3 Battery Cable Connection	12
4.4 AC Line Connection	13
4.5 Notes on Parallel Communication Connection of Lithium Battery.....	15
4.6 Grounding Connections in the System.....	15
5. Post-installation Inspection.....	16
5.1 Hardware Installation Inspection	16
5.2 Electrical Connection Inspection	16
5.3 Cable Installation Inspection	16
6. System Debugging	16
6.1 Wiring Inspection before Power-on.....	16
6.2 Battery Power-on	17
6.3 Inverter Power-on.....	17
6.4 Set Battery and Inverter Parameters.....	17
7. Operating Environment.....	18
7.1 Environmental Conditions.....	18
8. Routine Maintenance	18
8.1 Routine Maintenance	18
8.2 Alarm Troubleshooting.....	19
9. List of System Components.....	21
Appendix 1 – Electrical Schematic Diagram.....	23
Appendix 2 – Installation Guide for 550W PV Module Bracket.....	25
Appendix 3 – PV Module Rear Wiring Connection.....	31
Appendix 4 – Bracket Accessory List and Illustrations.....	33

Overview

This document is prepared for a residential off-grid solar energy system in 5kW/10kWh and 10kW/20kWh configuration, and covers product introduction, component introduction, installation, debugging, and system maintenance. In case of any discrepancy in the product description, please refer to the actual product.

The images in this document are for reference only. Please refer to the actual product structure.





Intended Readers

This document is primarily intended for the following engineers:

- Sales engineers
- Technical support engineers
- Maintenance engineers

Symbol Descriptions

The following symbols may appear in this document, representing the following:

Symbol	Description
	<p>Danger: An imminent dangerous situation may occur which, if not avoided, will result in death or serious injury.</p> <p>Warning: A potential dangerous situation may occur which, if not avoided, may result in death or serious injury.</p> <p>Caution: A potential dangerous situation may occur which, if not avoided, may result in moderate or minor personal injury.</p>
	<p>Note: A warning on equipment or environmental safety, if not avoided, may result in equipment damage, data loss, device performance degradation, environmental pollution, or other unanticipated results. A "Note" involves no risk of personal injury.</p>
	<p>It is used to convey equipment or environmental safety warning information.</p> <p>If not avoided, the situation may result in equipment damage, data loss, device performance degradation, environmental pollution, or other unanticipated results.</p> <p>A "Notice" involves no risk of personal injury.</p>
	<p>Instructions: Provide supplementary information related to the main text.</p>



Warning: When using this product, the PV module bracket and the ground bar of the PV and battery DC distribution box must be connected to the grounding pole or lightning protection grounding pole of the building. It is recommended that the grounding cable be no less than 10mm². A lightning protection grounding device shall be installed by a local engineering company holding the relevant construction certification.



Warning: When this product is connected to the battery, some circuits will still work after the PV and AC input power is disconnected.



The lines of the PV system contain HVDC and 220V AC voltage, and users need to arrange for qualified electricians to carry out installation, wiring and commissioning.

1. Introduction

1.1 Introduction to Off-grid System

This product consists of PV modules, off-grid PV inverter, lithium battery packs, PV and battery DC distribution box, AC input / output distribution box, PV module bracket, and the connecting cables of each component, auxiliary installation materials and other materials. The product features a split structure and is installed in the user's indoor waterproof and moisture-proof space.

1.2 Features

- The 5kW system inverter is configured with a set of 10.5kWh lithium batteries as standard, while the 10kW system is configured with two sets of 10.5kWh lithium batteries as standard. The battery pack uses a quick-connect port to facilitate capacity expansion. Users can expand the number of batteries to increase the backup time based on power backup requirements.
- The inverter has the ability to communicate with the BMS of the battery pack to read its total current and total SOC value.
- The inverter has a remote communication interface. After the installation of a data collector (WIFI or 4G mode, the collector as an optional device), system operation data can be uploaded to the cloud platform, and users can view it through a mobile phone APP or computer webpage.

2. Product Composition and Appearance

2.1 Typical Product Configuration Table for 5kW/10kWh Systems

Name	Model	Parameters	Specification	Quantity
5kW off-grid PV inverter	LSOTH5KT L-P2	MPPT voltage range (Vdc)	60-500	1
		Maximum PV input power (kWp)	5	
		Rated battery voltage (Vdc)	51.2	
		Maximum charging / Discharging current of the battery (A)	100	
		Rated mains voltage (Vac)	230	
		Maximum power input from the mains (kW)	5	
		Inverter output voltage (Vac)	220/230/240	
		Inverter output frequency (Hz)	50/60	
		Inverter output power (kW)	5	

10kWh battery pack	LSRW51V 205AH-LFP	Battery type	Lithium	1
		Rated voltage (V)	51.2	
		Capacity (Ah/kWh)	205/10.5	
		Maximum charging / Discharging current (A)	150	
550W PV module	550D(HPM) 72(182)	Open-circuit voltage (Vdc)	49.82	8
		Short-circuit current (A)	13.97	
		Maximum power voltage (Vdc)	42	
		Maximum power current (A)	13.1	
		Dimensions (mm)	2278x1134x30 (H x W x D)	
		Weight (kg)	26.3	
PV and battery DC distribution box	LSDB-PDC20-LY04	Configuration	PV input circuit breaker:16A/2P×1, SPD I _{max} =40KA×2 Battery circuit breaker: 125A/2P×1	1
		Dimensions (mm)	330x230x100 (W x H x D)	
		Weight (kg)	3.6	
		Installation method	Indoor wall-mounted, IP30, top and bottom cable entry	
AC Input / output distribution box	LSDB-AC22032C2 0-LY01	Configuration	AC input circuit breaker: 32A/2P×1 AC output leakage protection circuit breaker: 32A/2P×1+30mA	1
		Dimensions (mm)	330x230x100 (W x H x D)	
		Weight (kg)	3.2	
		Installation method	Indoor wall-mounted, IP30, top and bottom cable entry	

2.2 Typical Product Configuration Table for 10kW/20kWh Systems


Name	Model	Parameters	Specification	Quantity
10kW off-grid PV inverter	LSOTH10K TL-P2	MPPT voltage range (Vdc)	60-500	1
		Maximum PV input power (kWp)	10	
		Rated battery voltage (Vdc)	51.2	
		Maximum charging / Discharging current of the battery (A)	150	
		Rated mains voltage (Vac)	230	
		Maximum power input from the mains (kW)	10	
		Inverter output voltage (Vac)	220/230/240	
		Inverter output frequency (Hz)	50/60	
		Inverter output power (kW)	10	
10kWh battery pack	LSRW51V 205AH-LFP	Battery type	Lithium	2
		Rated Voltage (V)	51.2	
		Capacity (Ah/kWh)	205/10.5	
		Maximum charging / Discharging current (A)	150	
550W PV module	550D(HPM) 72(182)	Open-circuit voltage (Vdc)	49.82	16
		Short-circuit current (A)	13.97	
		Maximum power voltage (Vdc)	42	
		Maximum power current (A)	13.1	
		Dimensions (mm)	2278x1134x30 (H x W x D)	
		Weight (kg)	26.3	
PV and battery DC distribution box	LSDB-PDC20-LY05	Configuration	PV input circuit breaker:16A/2P×2, SPD I _{max} =40KA×2 Battery circuit breaker: 125A/2P×2	1
		Dimensions (mm)	492x230x100 (W x H x D)	
		Weight (kg)	6.2	

		Installation method	Indoor wall-mounted, IP30, top and bottom cable entry	
AC Input/output distribution box	LSDB-AC22063C2 0-LY01	Configuration	AC input circuit breaker: 63A/2P×1 AC output leakage protection circuit breaker: 63A/2P×1+30mA	1
		Dimensions (mm)	330x230x100 (W x H x D)	
		Weight (kg)	3.2	
		Installation method	Indoor wall-mounted, IP30, top and bottom cable entry	


INSTRUCTIONS The manufacturer will configure the shipped products according to the order requirements. The configuration in this Manual only matches products of the same packaging.

2.3 Product Wiring Schematic Description

2.3.1 5kW/10kWh System Wiring Diagram

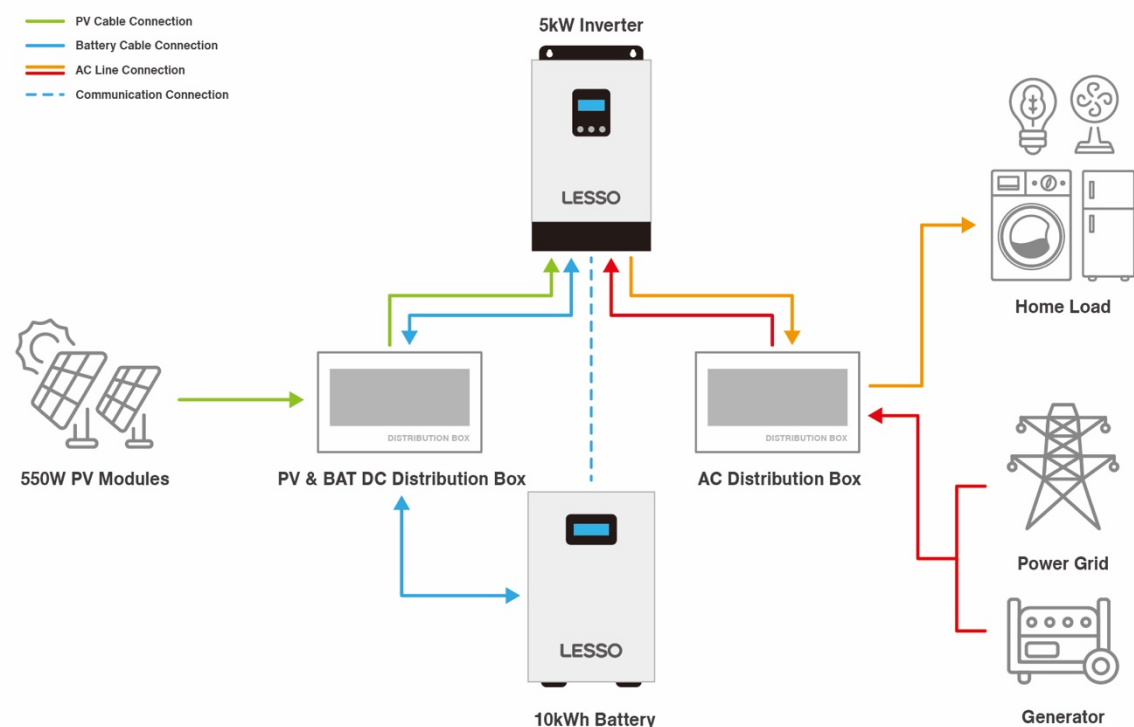

2.3.2 10kW/20kWh System Wiring Diagram

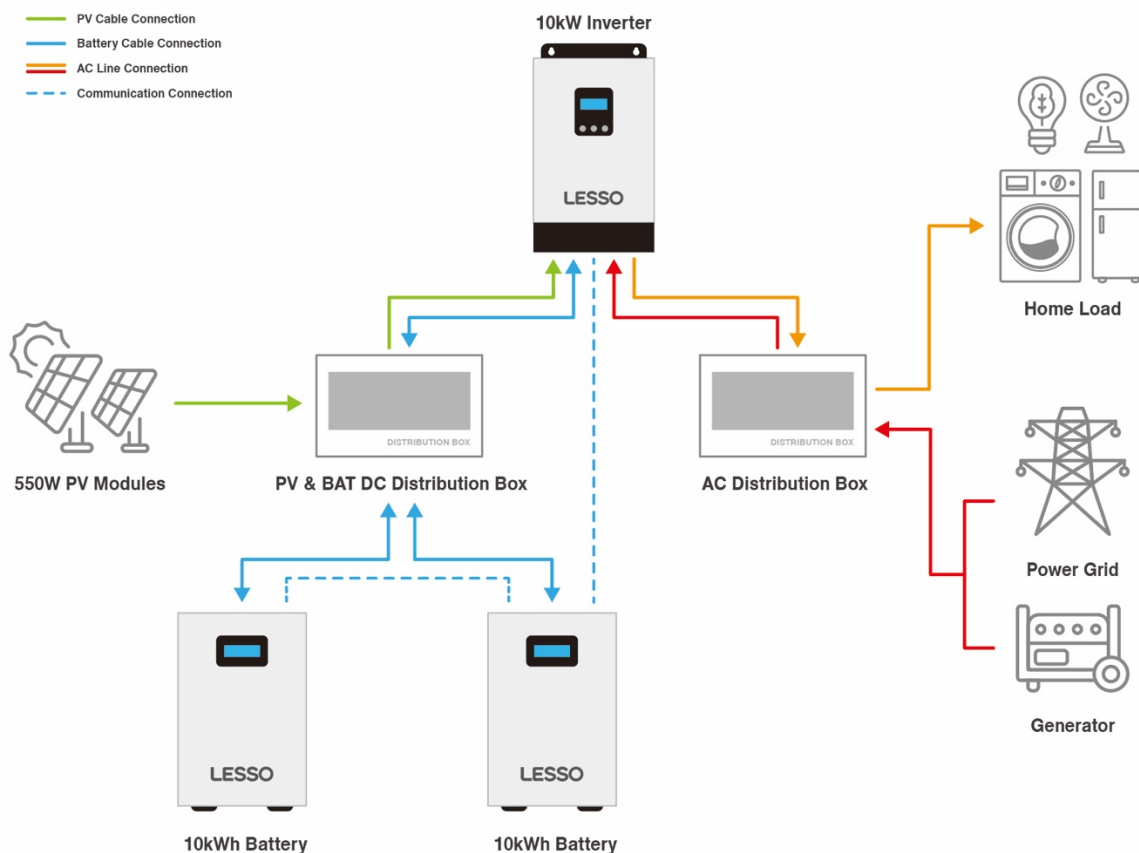

INSTRUCTIONS Please refer to the actual product. The solid line is the power connection, while the dotted line is the signal connection.

3. Equipment Installation

3.1 Safety Requirements

1. Only qualified technicians can carry out installation and maintenance.
2. Provide proper grounding for the equipment.
3. Keep the equipment environment clean and dry.
4. Avoid contact with exposed parts of the circuit.

3.2 Preparation for Installation

1. After the goods arrive at site, check whether the materials are complete according to the packing list.
2. Ensure a safe and clean installation site.
3. Get the required tools for equipment installation ready. Tools should be insulated before use.
4. Get the auxiliary materials required for installation and construction ready, including cable ties, insulation tape, expansion bolts, and cables.

3.3 Inverter Installation

1. Unpack the carton and take out the inverter.
2. Check whether all accessories inside the carton are complete.
3. Install the inverter according to the Inverter Manual.

* Refer to the Inverter Manual or the demonstration video for detailed installation steps.

3.4 Battery Pack Installation

1. Unpack the carton and take out the battery pack.
2. Check whether all accessories inside the carton are complete.
3. Refer to the instructions in the Battery Pack Manual for installation.


*Refer to the Battery Pack Manual or the demonstration video for detailed installation steps.



Warning: The weight of the battery pack exceeds 90kg. Please handle it carefully to avoid injury.

3.5 Distribution Box Installation

1. Unpack the outer protective packaging of the distribution box and take out the distribution box.
2. Check whether all installation accessories for the distribution box are complete.
3. Perform installation according to the following steps.
4. Open the panel on the distribution box.
5. Remove the two screws on the right and left of the distribution box panel and remove the panel.
6. Place the distribution box against the wall at an appropriate position and mark the four mounting holes in the box.
7. Use the plastic expansion tubes provided with the distribution box to drill holes in the marked positions on the wall.
8. Install the distribution box on the four plastic expansion tubes using the tapping screws provided with the distribution box.

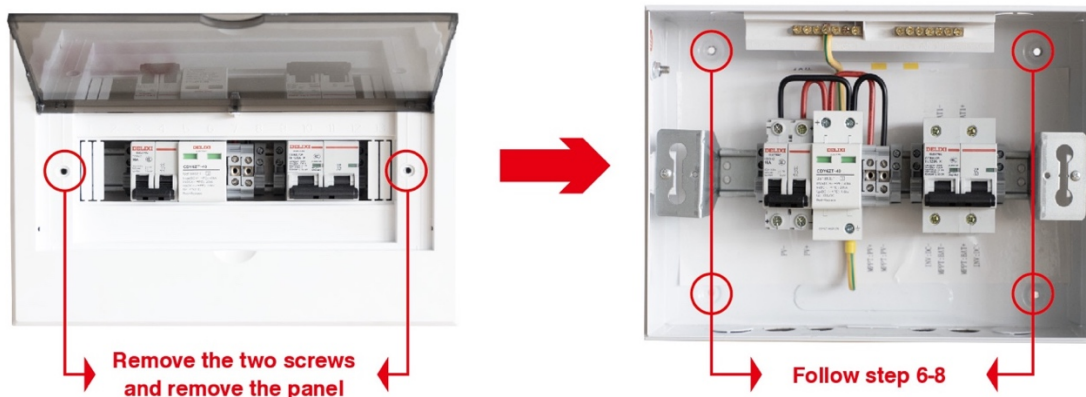

* Refer to the demonstration video for detailed installation steps.

3.6 550W PV Module and Bracket Installation

1. Disassemble the bracket wooden case and take out the 550W PV module bracket.
2. Check whether all accessories inside the carton are complete.
3. For details about how to install the L-shaped angle iron bracket, see the Appendix 2 – *Installation Guide for 550W PV Module Bracket*.

* Refer to the demonstration video for detailed installation steps.

4. Equipment Wiring Notes



Before performing the following operations, ensure that the inverter and battery pack are powered off, and that all circuit breakers in the distribution boxes are off.

4.1 Connection between PV Modules

1. Take out the 550W PV modules from the wooden case. The 5KW system requires eight pcs of 550W PV modules, while the 10KW system requires sixteen pcs of 550W PV modules.
2. After installing the modules on the bracket, connect the MC4 connector.
3. For cable connection steps, see the Appendix 3 – *PV Module Rear Wiring Connection*.



After the PV modules have been connected in series, the positive and negative terminals will be at a high DC voltage. Users need to arrange for a qualified electrician to connect and install the PV modules.

* Refer to the demonstration video for detailed installation steps.


4.2 PV Cable Connection

Connection Sequence: PV modules - PV circuit breakers of the PV and battery DC distribution box - inverter PV ports.


1. Use the PV cable with serial number ①, connect the MC4 female plug end of the cable to the positive MC4 male plug end of the PV array, and connect the pin end of the cable to the PV+ end of the PV circuit breaker in the PV and battery DC distribution box.
2. Use the PV cable with serial number ②, connect the MC4 male plug end of the cable to the negative MC4 female plug end of the PV array, and connect the pin end of the cable to the PV- end of the PV circuit breaker in the PV and battery DC distribution box.
3. Connect one end of the cable ③ with the PV+ terminal on the PV and battery DC distribution box and the other end with the PV+ port on the inverter (female end of MC4 port for 10kW system).
4. Connect one end of the cable ④ with the PV- terminal on the PV and battery DC distribution box and the other end with the PV- port on the inverter (male end of MC4 port for 10kW system).

See the figure below or the demonstration video for detailed installation steps.

4.2.1 5kW/10kWh System PV Cable Connection Diagram

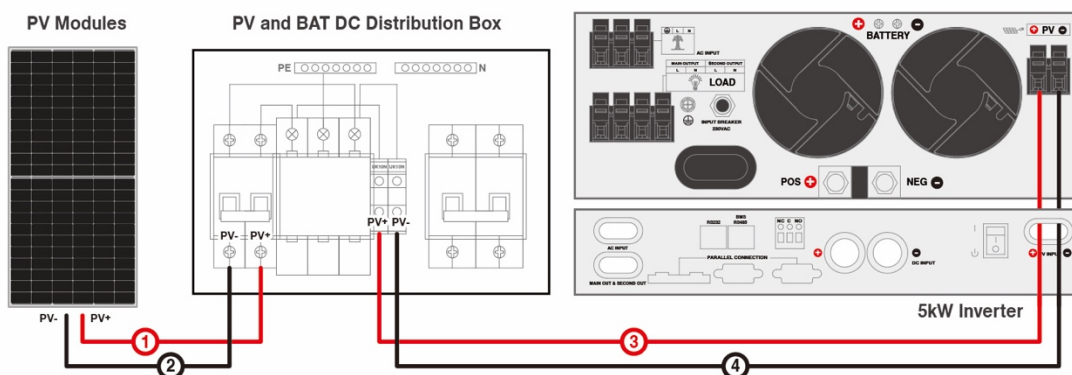

4.2.2 10kW/20kWh System PV Cable Connection Diagram

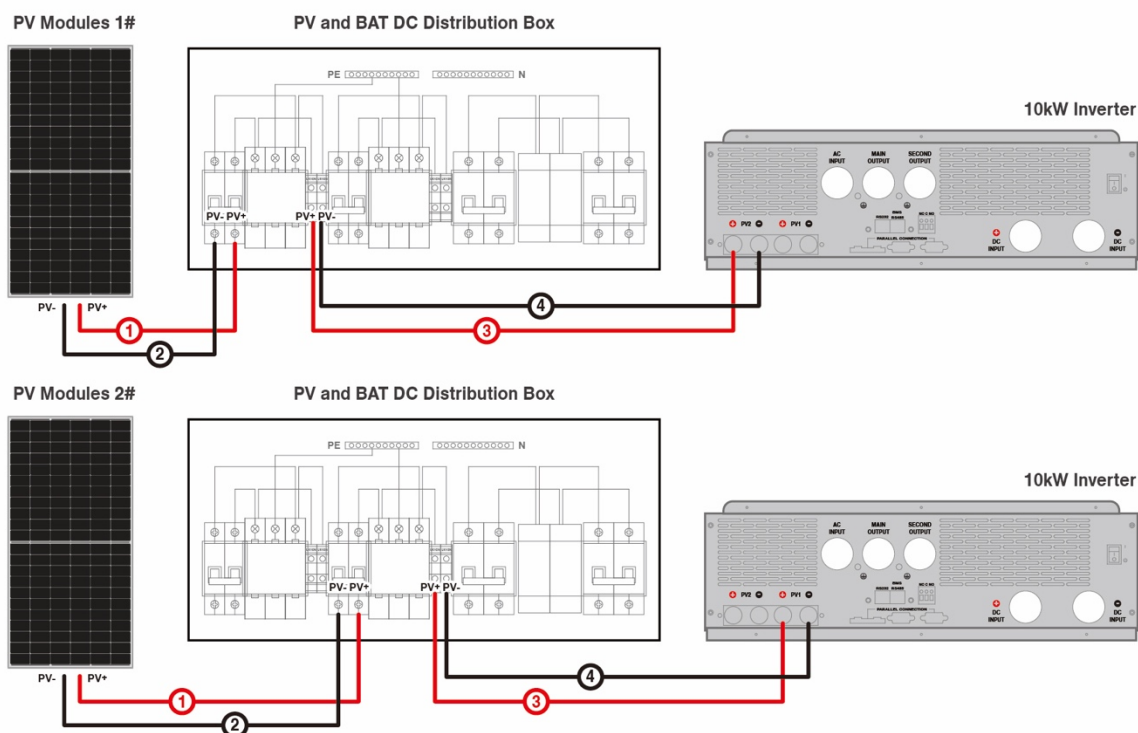

Cable List of the 5kW/10kW System:

No.	Name & Specifications	Quantity	Applications
①	PV cable 6mm ² red 30m	1	Connect the positive MC4 connector of the PV array to the positive terminal on the PV circuit breaker in the PV and battery DC distribution box
②	PV cable 6mm ² black 30m	1	Connect the negative MC4 connector of the PV array to the negative terminal on the PV circuit breaker in the PV and battery DC distribution box

③	PV cable 2.5mm ² red 2m	1/2	Connect the PV+ terminal of the PV and battery DC distribution box to the PV+ port of the inverter (female end of MC4 port for 10kW system)
④	PV cable 2.5mm ² black 2m	1/2	Connect the PV- terminal of the PV and battery DC distribution box to the PV- port of the inverter (male end of MC4 port for 10kW system)


4.3 Battery Cable Connection

Connection Sequence: Positive and negative battery ports - battery circuit breakers on the PV and battery DC distribution box – inverter BAT ports.


1. Use the battery cable with serial number ⑤, connect the quick connector of the cable to the BAT+ port, and connect the tubular terminal end of the cable to the BAT+ end below the battery circuit breaker of the PV and battery DC distribution box.
2. Use the battery cable with serial number ⑥, connect the quick connector of the cable to the BAT- port, and connect the tubular terminal end of the cable to the BAT- terminal below the battery circuit breaker of the PV and battery DC distribution box.
3. Use cable with serial number ⑦, connect one end of the cable to the BAT+ end above the battery circuit breaker in the PV and battery DC distribution box, and connect the circular terminal of the cable to the BAT+ port of the inverter.
4. Use cable with serial number ⑧, connect one end of the cable to the BAT- terminal above the battery circuit breaker in the PV and battery DC distribution box, and connect the circular terminal of the cable to the BAT- port of the inverter.

See the figure below or the demonstration video for detailed installation steps.

4.3.1 5kW/10kWh System Battery Connection Diagram

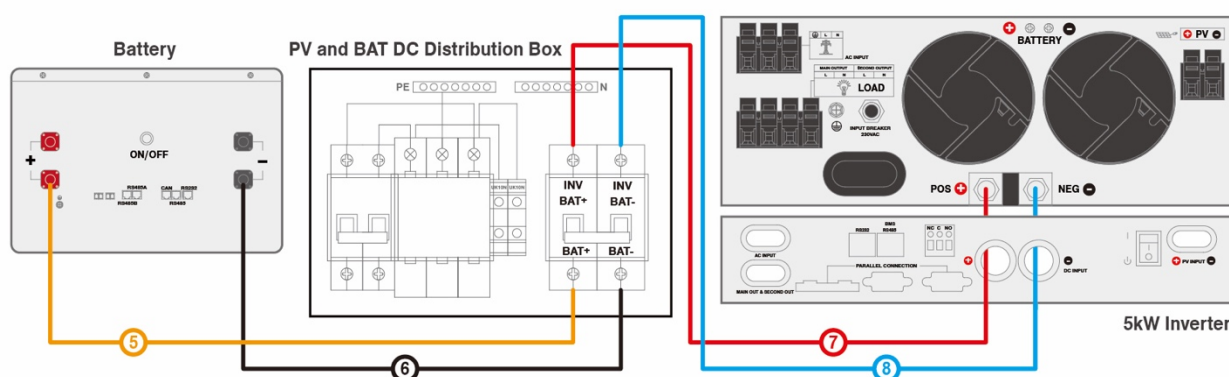

4.3.2 10kW/20kWh System Battery Connection Diagram

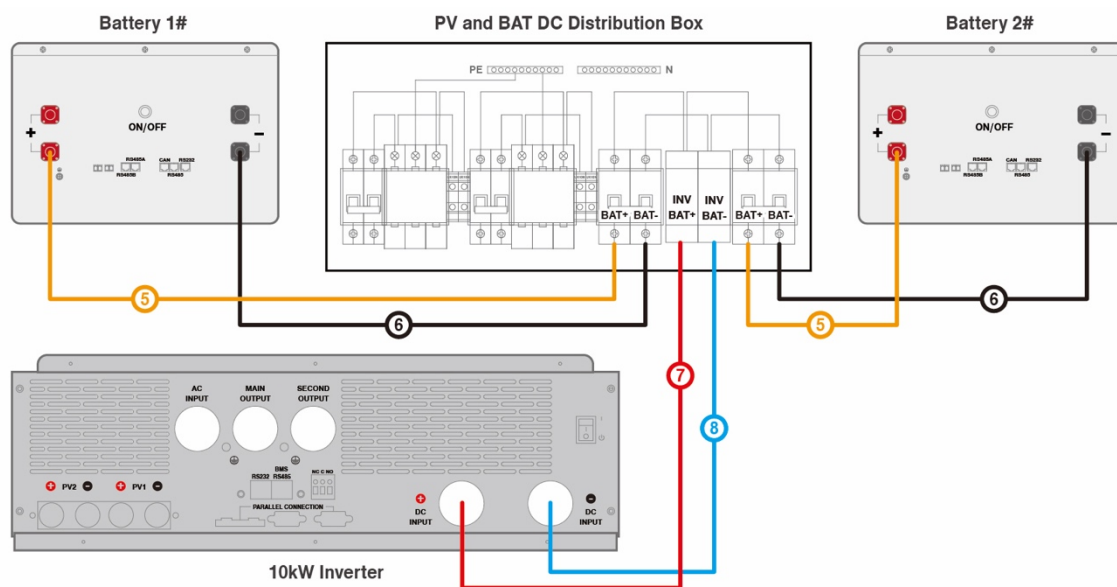

Cable List:

No.	Name & Specifications	Quantity	Applications
⑤	Battery cable 35mm ² orange 2m	1	Connect the positive terminal connector of the battery to the positive terminal of the battery circuit breaker in the PV and battery DC distribution box
⑥	Battery cable 35mm ² black 2m	1	Connect the negative terminal connector of the battery to the negative terminal of the battery circuit breaker in the PV and battery DC distribution box
⑦	Battery cable 25mm ² red 2m	1	Connect the BAT+ terminal of the PV and battery DC distribution box to the BAT+ port on the inverter (5kW system)
⑧	Battery cable 25mm ² blue 2m	1	Connect the BAT- terminal of the PV and battery DC distribution box to the BAT- port on the inverter (5kW system)
⑦	Battery cable 50mm ² red 2m	2	Connect the BAT+ terminal of the PV and battery DC distribution box to the BAT+ port on the inverter (10kW system)
⑧	Battery cable 50mm ² blue 2m	2	Connect the BAT- terminal of the PV and battery DC distribution box to the BAT- port on the inverter (10kW system)

4.4 AC Line Connection

Connection Sequence: **AC Input Cable:** AC input circuit breakers of the AC distribution box - AC input ports on the inverter; **AC Output Cable:** AC output ports on the inverter - AC output leakage protection circuit breakers of the AC distribution box.


1. Use the AC input cable ⑨, connect one end of the brown cable L to the AC input circuit

breaker L on the AC distribution box and the other end to the AC input port L on the inverter; connect one end of the blue cable N to the AC input circuit breaker N on the AC distribution box, and the other end to the AC input port N on the inverter; connect one end of the yellow-green PE cable to the \oplus row screw on the AC distribution box, and the other end to the AC input PE port on the inverter.


2. Use the AC input cable ⑩, connect one end of the brown cable L to the AC output leakage protection circuit breaker L on the AC distribution box and the other end to the AC output port L on the inverter; connect one end of the blue cable N to the AC output leakage protection circuit breaker N on the AC distribution box, and the other end to the AC output port N on the inverter; connect one end of the yellow-green PE cable to the \oplus row screw on the AC distribution box, and the other end to the AC output PE port on the inverter.

See the figure below or the demonstration video for detailed installation steps.

4.4.1 5kW/10kWh System Battery Connection Diagram

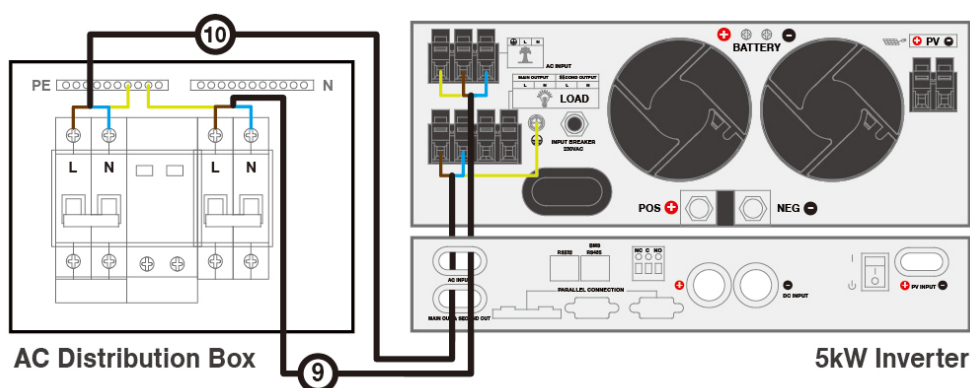

4.4.2 10kW/20kWh System Battery Connection Diagram

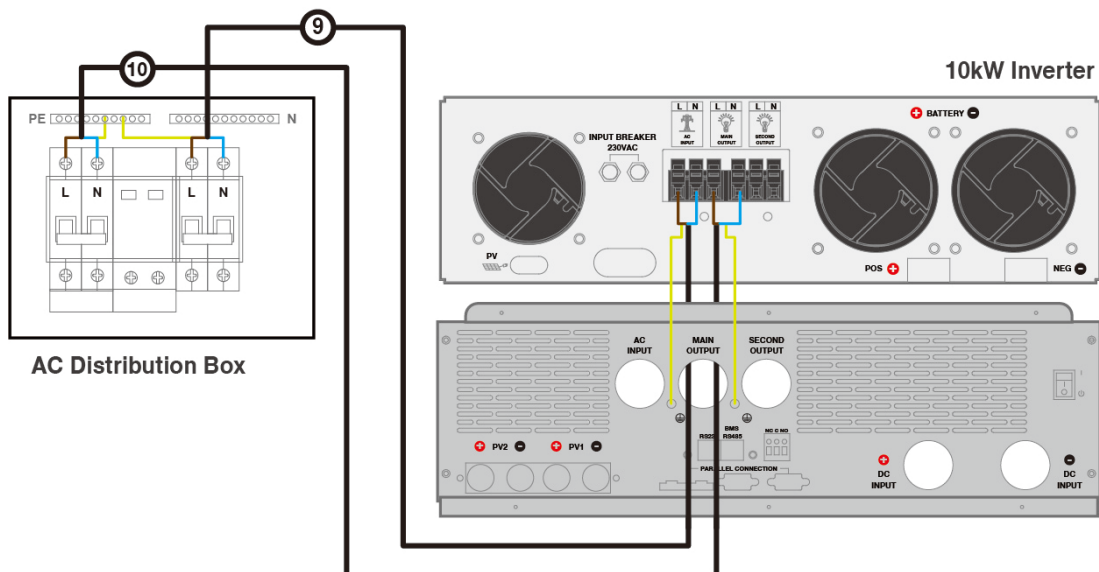

Cable List:


No.	Name & Specifications	Quantity	Applications
⑨	AC input cable 3x6mm ² black 2m	1	Connect the AC input circuit breaker on the AC distribution box to the AC input port on the inverter (5KW system)
⑩	AC output cable 3x6mm ² black 2m	1	Connect the AC output leakage protection circuit breaker on the AC distribution box and the AC output port on the inverter (5KW system)
⑨	AC input cable 3x10mm ² black 2m	1	Connect the AC input circuit breaker on the AC distribution box to the AC input port on the inverter (10KW system)
⑩	AC output cable 3x10mm ² black 2m	1	Connect the AC output leakage protection circuit breaker on the AC distribution box and the AC output port on the inverter (10KW system)

4.5 Notes on Parallel Communication Connection of Lithium Battery

Connection Sequence: Inverter BMS port - 1# battery pack RS485 port - of 1# battery pack RS485A port - 2# battery pack RS485B port.

1. Use the communication cable provided by the 1# battery pack, with one end of the cable connected to the BMS port of the inverter and the other end connected to the RS485 port of the 1# battery pack; use the communication cable provided by the 2# battery pack, with one end of the cable connected to the RS485 port of the 1# battery pack and the other end connected to the RS485 port of the 2# battery pack.
2. Set the 1# battery address and 2# battery address according to the Battery Manual.

See the figure below or the demonstration video for detailed installation steps.

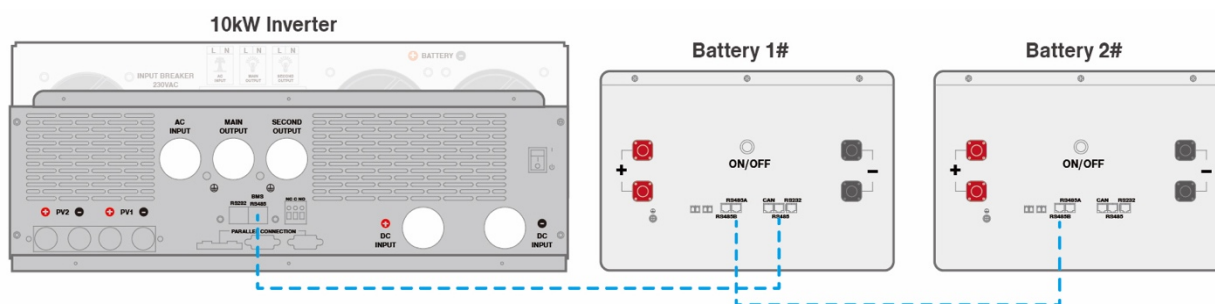**4.6 Grounding Connections in the System**

1. The inverter is connected to the PE copper bar of the AC distribution box through the ground cable of the AC input / output cable.
2. Connect the battery pack to the PE copper bar of the DC distribution box using a ground cable provided with the battery pack.
3. The PE ground bar on the PV and battery DC distribution box and AC distribution box should be connected to the power grid grounding cable of the user's home; the copper

core cable should have a wire diameter of no less than 10mm².

4. Connect the ground cable of the PV module bracket to the grounding pole of the building's ground network. Copper core cable with a wire diameter of no less than 10mm² or 40x4 flat steel should be used.



For the wiring work required on items 3 and 4, the user should arrange for a professionally qualified electrician or engineer to perform the operation. The cables and accessories used in the wiring work on items 3 and 4 shall be provided by the user or the construction company.

5. Post-installation Inspection

5.1 Hardware Installation Inspection

- Check whether all screws are tight (pay particular attention to electrical connections). Flat washers and spring washers must be complete and cannot be installed backwards.

5.2 Electrical Connection Inspection

- Check whether all circuit breakers are OFF.
- Check whether the positive and negative terminals are correctly connected to ensure no short circuits.
- Check whether the input and output power cables and protective ground cables are correctly connected. Ensure that the input and output power cables have no short circuits.

5.3 Cable Installation Inspection

- Check whether all cables have been securely connected.
- Check whether all cables are properly bound to the nearest cable tie and are not twisted or overly bent.
- Check whether the labels on the cables are correct. Ensure that they have not fallen off or been damaged, and that the labels face the same direction for easy viewing.

6. System Debugging

6.1 Wiring Inspection before Power-on

- Step 1.** Check that all cables to the inverter, battery, PV module, and distribution boxes are correctly connected.
- Step 2.** Use the voltage level on the multimeter to check whether there is no voltage on the PV, battery, AC input and AC output ports of the inverter when the system is turned off.
- Step 3.** Check whether the ground cables of the PV bracket, inverter, battery and distribution boxes are securely connected. The recommended ground resistance is $\leq 1\Omega$.

6.2 Battery Power-on

- Step 1.** Ensure that the battery circuit breaker on the DC distribution box is off.
- Step 2.** Turn on the switch on the battery panel. The operating light should turn green. The LCD screen on the battery displays information about the battery voltage and temperature, and displays no warning, indicating that the battery is working properly.
- Step 3.** Use a voltmeter to measure whether the battery terminal voltage of the battery switch on the DC distribution box is 48V. If the voltage is normal, close the battery circuit breaker. After the inverter is powered on, it will start to operate.

6.3 Inverter Power-on

- Step 1.** Ensure that the PV circuit breaker on the DC distribution box and the AC input / output circuit breaker are disconnected.
- Step 2.** After the battery supplies power to the inverter, the inverter will start and the LCD panel will display information.
- Step 3.** Press the inverter button. The inverter outputs a 230V AC voltage. The LCD panel displays the output parameters and icons of the inverter.
- Step 4.** After the inverter output turns normal, turn on the PV circuit breaker. The PV module will supply power to the inverter, and the LCD panel will display the PV parameters and icons.
- Step 5.** After the PV input is working properly, turn on the mains input switch (if there are standby mains or AC power on site; if not, omit this step); After the connection of the mains to the inverter, the inverter will be in standby state, and the LCD panel will display mains parameters and icons.
- Step 6.** Turn on the AC output circuit breaker on the AC distribution box. The inverter will supply power to the user's home appliances.



The inverter and battery have been configured before delivery. The default operating mode for the inverter is the SBU mode (PV - battery - mains).

6.4 Set Battery and Inverter Parameters

Please read the Battery and Inverter Manual carefully, or consult customer service personnel for assistance.

INSTRUCTIONS

If the battery parameters are incorrectly set, the batteries may age prematurely. Please set the parameters strictly according to the actual situation on site.

7. Operating Environment

7.1 Environmental Conditions


- Storage Temperature: -20°C ~ +65°C
- Charging Temperature: -0 ~ +50°C
- Discharging Temperature: -10°C ~ +60°C
- Relative Humidity for Storage and Transportation: 5 ~ 95% (40°C ± 2°C)
- Altitude: Below 4000m, above 2000m use at a reduced rate.

8. Routine Maintenance

8.1 Routine Maintenance

Maintenance engineers need to specify a maintenance period based on local conditions. The recommended maintenance period is once every three months.

Routine Maintenance List

Maintenance Item	Inspection Item	Inspection Method	Issue	Solution
Electrical	Is the voltage normal?	Multimeter	DC input voltage beyond the normal range	Refer to the Inverter Manual.
Fault inspection	Is the indicator light normal?	Visual inspection	Fault alarm	Refer to the Inverter Manual.
Grounding inspection	Is the power supply grounding point properly connected to the grounding bar?	Multimeter	Resistance between the power supply grounding point and the grounding bar is greater than 1Ω.	Retighten the grounding point or replace the grounding cable.
Leakage protection inspection	Is the leakage protection switch operating normally?	Manually press the yellow button for tripping, then press the R button to re-close the switch. 	Press the R button after tripping; closing cannot be operated.	Replace the leakage protection switch.

8.2 Alarm Troubleshooting

INSTRUCTIONS The content of the alarm signal needs to be viewed in the alarm message generated by the data platform or in the alarm message generated by the battery and inverter.

8.2.1 DC Over-voltage

Possible cause	<ul style="list-style-type: none"> • The DC over-voltage alarm point of the battery BMS has been incorrectly set. • The equalizing and floating charging voltage of the inverter has been set too high. • The individual voltage of the battery cell is too high.
Solution	<ol style="list-style-type: none"> 1. Reset the DC over-voltage alarm point of the battery BMS. Refer to the Battery Manual. 2. Reset the equalizing and floating charging voltage of the inverter. Refer to the Inverter Manual. 3. Check the voltage of the battery cell. If the voltage of the individual battery cell is still too high after the battery is charged and enters discharge state, contact after-sales personnel for assistance.

8.2.2 DC Under-voltage

Possible cause	<ul style="list-style-type: none"> • The DC under-voltage alarm point of the battery BMS has been incorrectly set. • The floating charging voltage of the inverter has been set too low. • Battery module fault.
Solution	<ol style="list-style-type: none"> 1. Reset the DC under-voltage alarm point of the battery BMS. 2. Check whether the floating charge voltage has been set to a reasonable value. If not, adjust the value based on the actual situation. 3. Check whether the capacity of the power system does not meet the load requirements due to a battery module fault. If yes, replace the battery module.

8.2.3 Battery Circuit Disconnected

Possible cause	<ul style="list-style-type: none"> • The battery circuit breaker is off. • The battery circuit breaker cable is loose.
Solution	<ol style="list-style-type: none"> 1. Check whether the battery circuit breaker is off. If yes, rectify the fault on the back-end circuit of the circuit breaker and close the switch. 2. Check whether the battery circuit breaker cable is loose. If yes, secure the cable again.

8.2.4 Battery BMS Output Off

Possible cause	<ul style="list-style-type: none">• Battery over-discharge protection.• Ambient temperature is too high.• Battery BMS fault.
Solution	<ol style="list-style-type: none">1. Charge the battery to full capacity.2. Lower the temperature to ensure that the ambient temperature is within the operating range.3. Apply for repair and request after-sales personnel to handle the problem.

8.2.5 Battery Fault

Possible cause	<ul style="list-style-type: none">• The battery port is improperly connected.• The battery cell is damaged.• The battery BMS is abnormal.• Battery over-current protection.
Solution	<ol style="list-style-type: none">1. Press the battery switch button to restart the battery.2. Rewire the positive and negative battery cables while ensuring good contact.3. Apply for repair and request after-sales personnel to handle the problem.

8.2.6 Inverter and Battery Pack Communication Failure

Possible cause	<ul style="list-style-type: none">• The battery address has been set incorrectly.• The battery communication cable is not making good contact.• Battery BMS fault.
Solution	<ol style="list-style-type: none">1. Check whether the address is wrong against the Battery Manual.2. Remove the communication cable and reconnect it.3. Apply for repair and request after-sales personnel to handle the problem.

9. List of System Components

5kW/10kWh System


No.	Name	Model/Use	Quantity	Remarks
1	5kW inverter	LSOTH5KTL-P2	1 unit	Packed in wooden 5kW inverter case
2	205Ah/10kWh battery	LSRW51V205AH-LFP	1 unit	Individually packed
3	PV and battery DC distribution box	LSDB-PDC20-LY04	1 unit	Packed in wooden 5kW inverter case
4	AC input / output distribution box	LSDB-AC22032C20-LY01	1 unit	Packed in wooden 5kW inverter case
5	550W PV module	550D(HPM)72(182)	8 pcs	Individually packed
6	Aluminum alloy PV module mounting bracket		1 set	Packed in wooden bracket case
7	Aluminum alloy solar PV cable	PV and battery DC distribution box PV circuit breaker and PV module connection cable	2 pcs	①+② packed in wooden 5kW inverter case
8	2.5mm ² cable	PV and battery DC distribution box PV circuit breaker and inverter connection cable	2 pcs	③+④ packed in wooden 5kW inverter case
9	35mm ² cable	PV and battery DC distribution box battery circuit breaker and battery connection cable	2 pcs	⑤+⑥ packed in wooden 5kW inverter case
10	25mm ² cable	PV and battery DC distribution box battery circuit breaker and inverter connection cable	2 pcs	⑦+⑧ packed in wooden 5kW inverter case
11	3x6mm ² cable	AC distribution box AC input / output circuit breaker and inverter connection cable	2 pcs	⑨+⑩ packed in wooden 5kW inverter case
12	MC4 PV connector copper-aluminum transition male and female		1 pair	Backup, packed in wooden 5kW inverter case
13	Copper and aluminum pin		2 pcs	Backup, packed in wooden 5kW inverter case
14	Electrical tape		1 roll	Packed in wooden 5kW inverter case
15	Ties		100 pcs	Packed in wooden 5kW inverter case
16	Plastic cable tray		1 pcs	Packed in wooden bracket case
17	Expansion pipe		20 pcs	Packed in wooden bracket case
18	Self-tapping screw		20 pcs	Packed in wooden bracket case

10kW/20kWh System

No.	Name	Model/Use	Quantity	Remarks
1	10kW inverter	LSOTH10KTL-P2	1 unit	Packed in wooden 10kW inverter case
2	205Ah/10kWh battery	LSRW51V205AH-LFP	2 unit	Individually packed
3	PV and battery DC distribution box	LSDB-PDC20-LY05	1 unit	Packed in wooden 10kW inverter case
4	AC input / output distribution box	LSDB-AC22063C20-LY01	1 unit	Packed in wooden 10kW inverter case
5	550W PV module	550D(HPM)72(182)	16 pcs	Individually packed
6	Aluminum alloy PV module mounting bracket		2 sets	Packed in wooden bracket case
7	Aluminum alloy solar PV cable	PV and battery DC distribution box PV circuit breaker and PV module connection cable	2 pcs	①+② packed in wooden 10kW inverter case
8	2.5mm ² cable	PV and battery DC distribution box PV circuit breaker and inverter connection cable	4 pcs	③+④ packed in wooden 10kW inverter case
9	35mm ² cable	PV and battery DC distribution box battery circuit breaker and battery connection cable	2 pcs	⑤+⑥ packed in wooden 10kW inverter case
10	50mm ² cable	PV and battery DC distribution box battery circuit breaker and inverter connection cable	2 pcs	⑦+⑧ packed in wooden 10kW inverter case
11	3x10mm ² cable	AC distribution box AC input / output circuit breaker and inverter connection cable	2 pcs	⑨+⑩ packed in wooden 10kW inverter case
12	MC4 PV connector copper-aluminum transition male and female		2 pair	Backup, packed in wooden 10kW inverter case
13	Copper and aluminum pin		4 pcs	Backup, packed in wooden 10kW inverter case
14	Electrical tape		1 roll	Packed in wooden 10kW inverter case
15	Ties		100 pcs	Packed in wooden 10kW inverter case
16	Plastic cable tray		1 pcs	Packed in wooden bracket case
17	Expansion pipe		20 pcs	Packed in wooden bracket case
18	Self-tapping screw		20 pcs	Packed in wooden bracket case

Appendix 1 – Electrical Schematic Diagram

Electrical diagram of 5kW PV off grid system

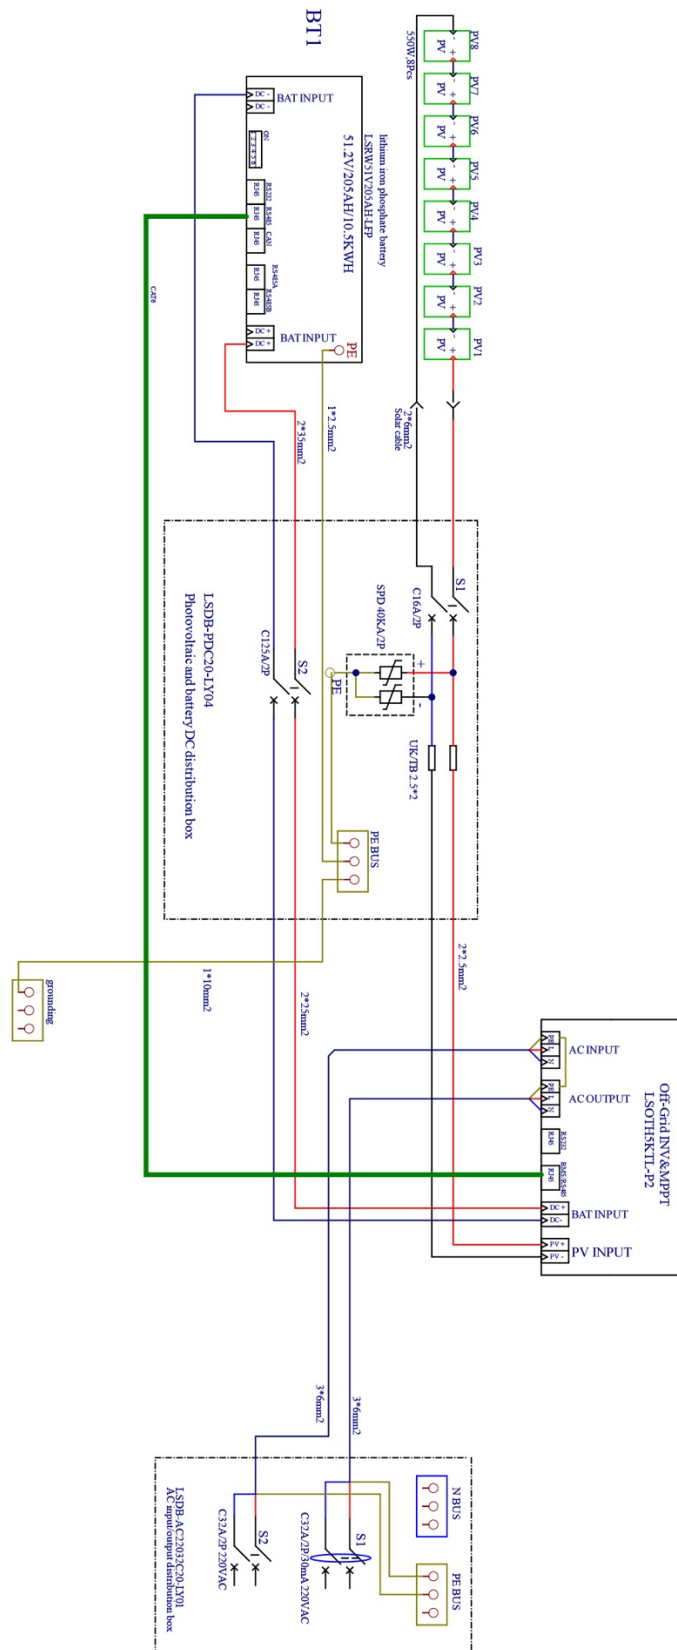


Appendix 2 – Installation Guide for 550W PV Module Bracket

Step 1. This guideline is based on the example of BH-760 angular steel sheet; the remaining specifications for angular steel sheet can be carried out by referring to this installation document. This set of PV mounting brackets is equipped with 2 types of fixtures: angular type fixtures and vertical type fixtures, which can be adapted to different specifications of color coated steel sheet. Customers using a steel sheet type other than the two matching fixtures are required to provide a suitable type of fixture.




Step 2. Firstly, install the angular type fixtures on the projection of the color coated steel sheet. One set of fixtures is comprised 2 pcs installed together using 2 M8 bolts. As shown in the figure below:

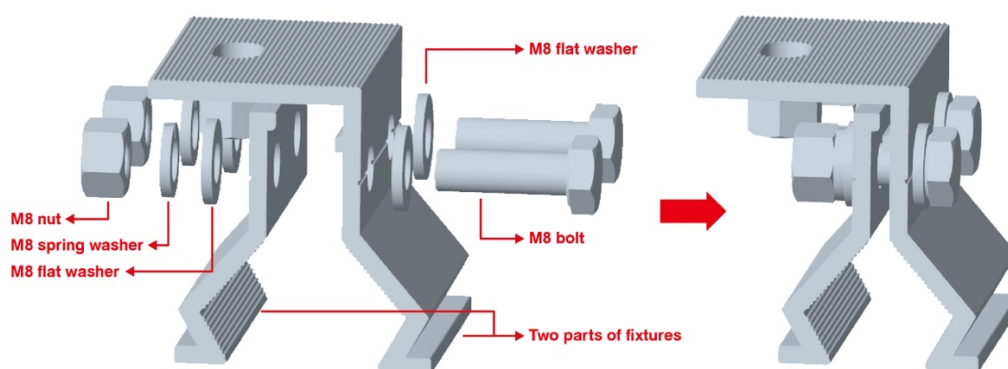


Pre-assemble the two parts of the fixture first by attaching the parts shown in the diagram in sequence.

After installation in the projection of the color coated steel sheet, the fixture will be as shown in the figure below (the different colors are merely for the sake of differentiation).

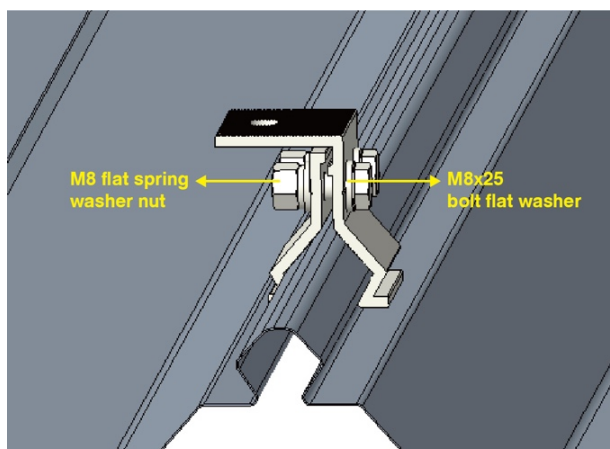

Step 3. Fix the fixtures to steel sheet with the following reference dimensions for a total of $14 \times 2 = 28$ sets of fixtures.

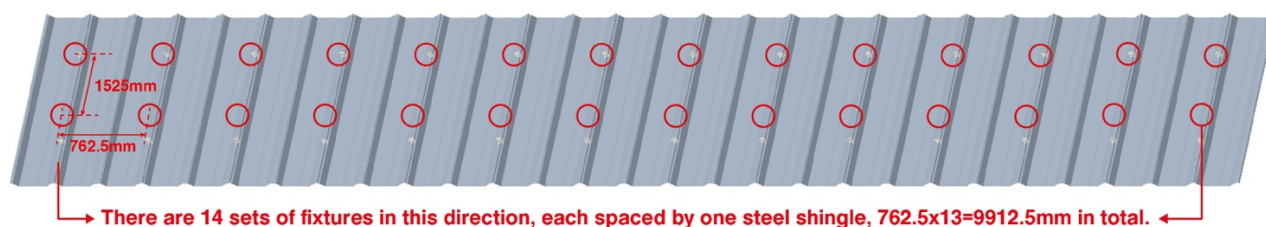

Step 4. Refer to the position of the fixtures on the steel sheet, pre-install the M8x25 bolts to the guide rail (Figure 1); install two more M8x25 bolts (Figure 2) at each of the end-to-end connections of the two guide rails to lock the guide rail connector.

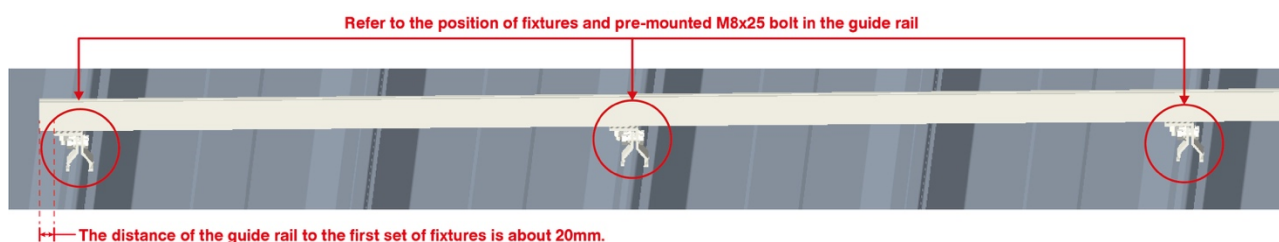


Figure 1 Pre-installation of M8x25 bolts on the guide rail


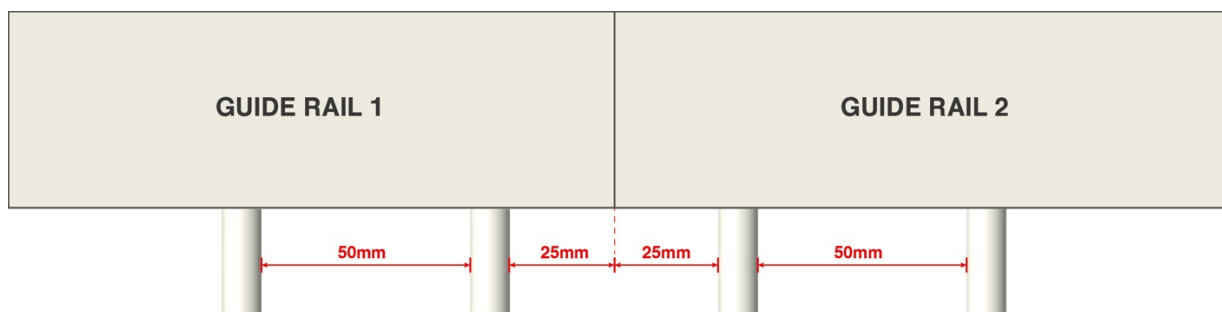


Figure 2 Pre-installation of two more M8x25 bolts at each end-to-end connection of the two guide rails


Step 5. The guide rail and the connector are locked on the fixture, with 1 connector used for every 2 guide rails, with 8 connectors in total.

5.1 First lock a group of end guide rails to the fixture (from left to right below), as shown. below:

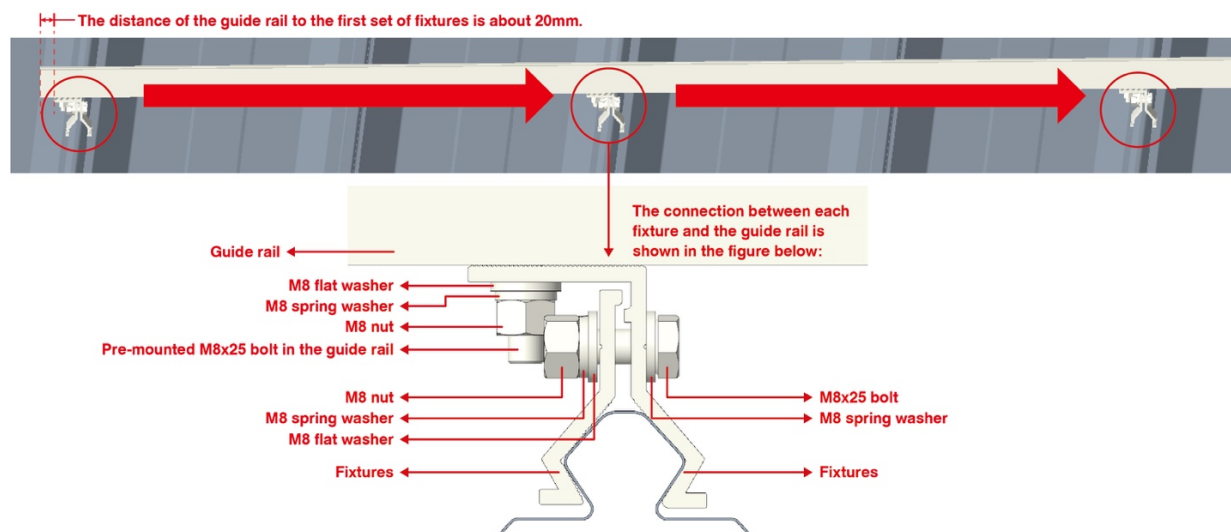


5.2 Repeat Step 5.1 to install the second guide rail close to the end of the first guide rail.

5.3 Install the guide rail connector in the middle of the two guide rails, and fix the rail and the connector with four M8x25 combination bolts. As shown in the figure below:

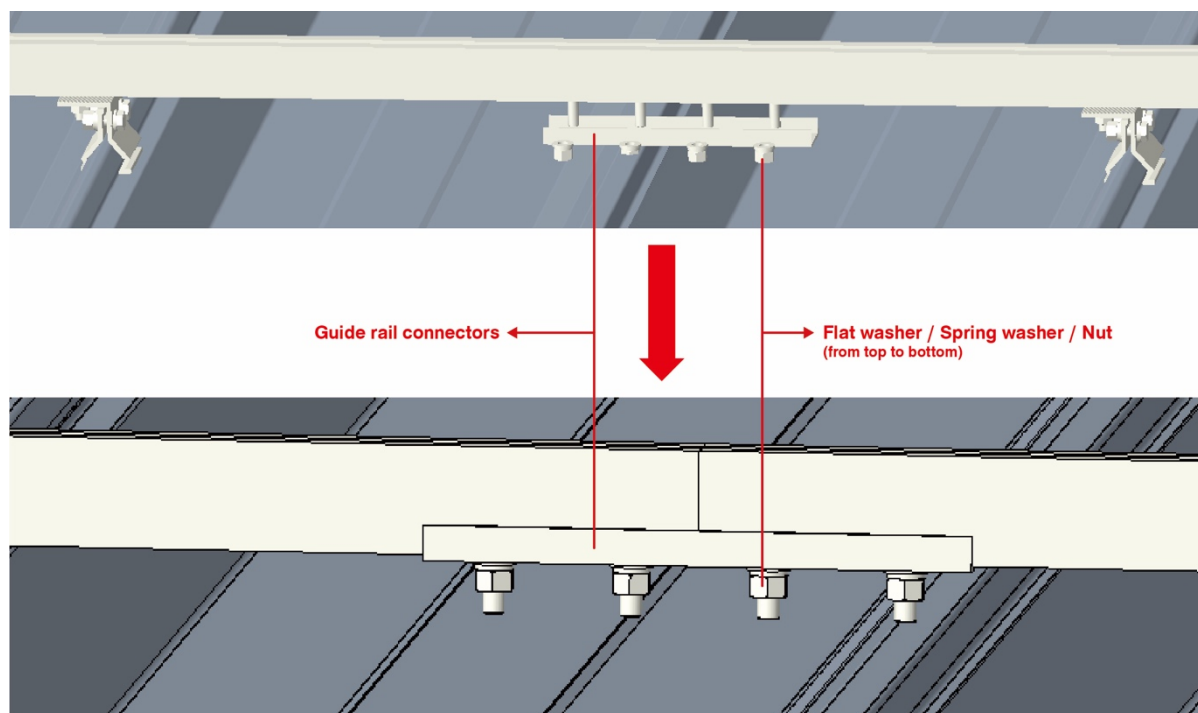


5.4 Repeat Steps 5.2 to 5.3 above to install two guide rails and two guide rail connectors from left to right.

5.5 Install the rightmost end guide rail (similar to 5.1), as shown in the following figure.

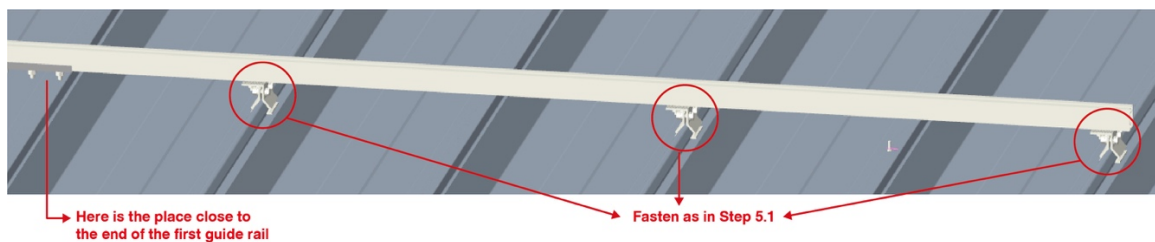


5.6 Repeat Step 5.3 to install the guide rail connectors.

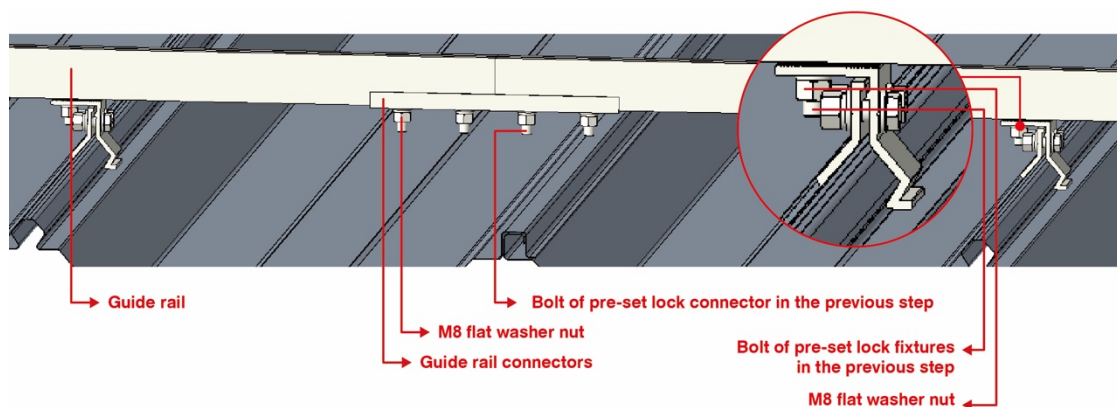


5.7 The 5 guide rails on one side are installed completely.

Step 6. Repeat Steps 5.1-5.6 above to install the second group of 5 guide rails. The 2 groups of guide rails installed are shown in the following figure.

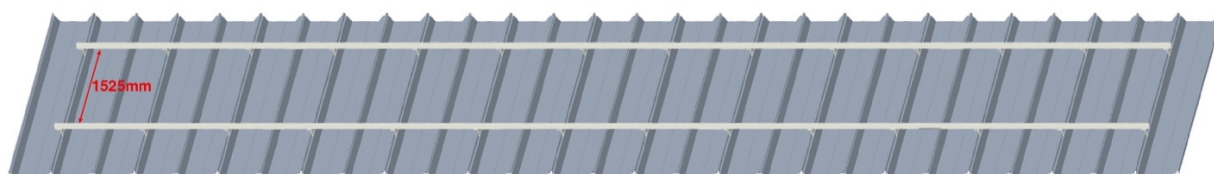


Step 7. Mounting the PV module to the bracket requires the use of edge clamps and center clamps for fixing. The PV modules on both sides are fixed using edge clamps, with the center parts fixed between the two modules. Two edge clamps and two center clamps are required for each side, as shown in the figure below:

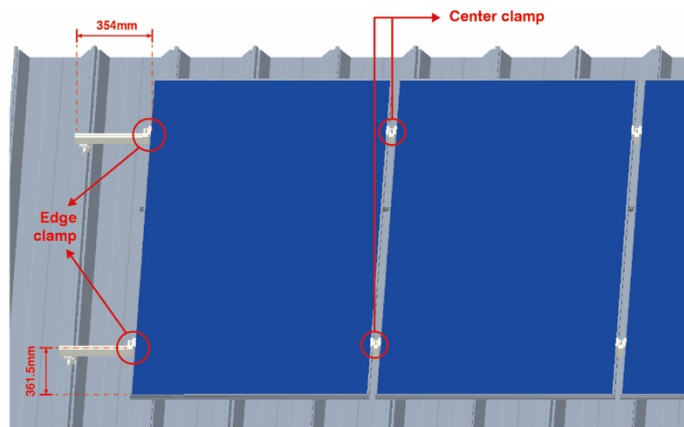




Note: As the PV module is installed on the surface of the color coated steel sheet, the space between the rear of the module and the steel sheet will be very narrow, meaning no wiring can be carried out after installation. Hence, individual wiring needs to be performed for each module installed. The wiring method for the modules is shown in Appendix 3.


Step 8. Additional bracket ground connection measures for installation of edge clamps. The surface oxide layer of the PV module frame and aluminum alloy guide rail is a non-conductive structure. In order to create the lightning protection grounding connection of the module and the bracket as a whole, it is necessary to connect the metal parts of the module and the bracket with a double spike gasket. The installation of the double spike gasket and the edge clamps on the guide rail is shown in the following figure: (The side with more puncture points on the double spike gasket faces upwards).

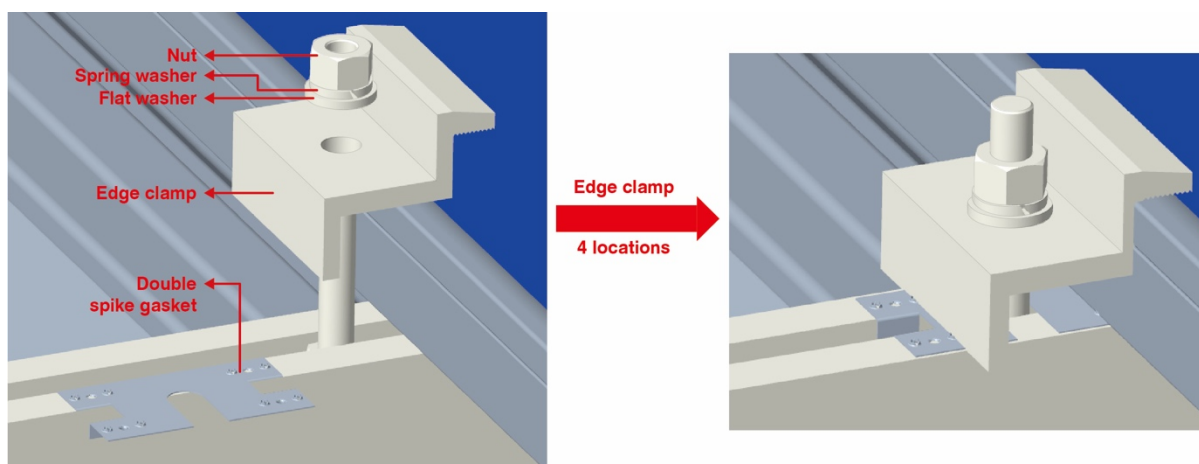


Step 9. Additional bracket ground connection measures for installation of center clamps. As with the edge clamps above, the center clamps also need to connect the metal parts of the module and the bracket with a double spike gasket. The installation of the gasket and the center clamps on the guide rail is shown in the following figure.

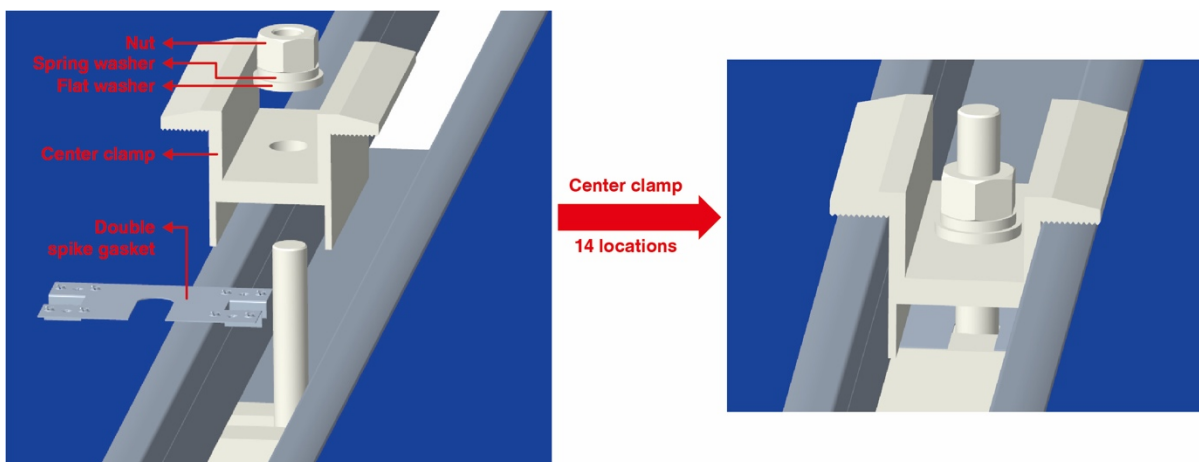

Step 10. The edge and center clamps after installation of the double spike gasket are as shown in the following figure. Test different gaskets with a multimeter short-circuit buzzer. A beep proves that the guide rail on the bracket and the module frame have a complete metal connection.

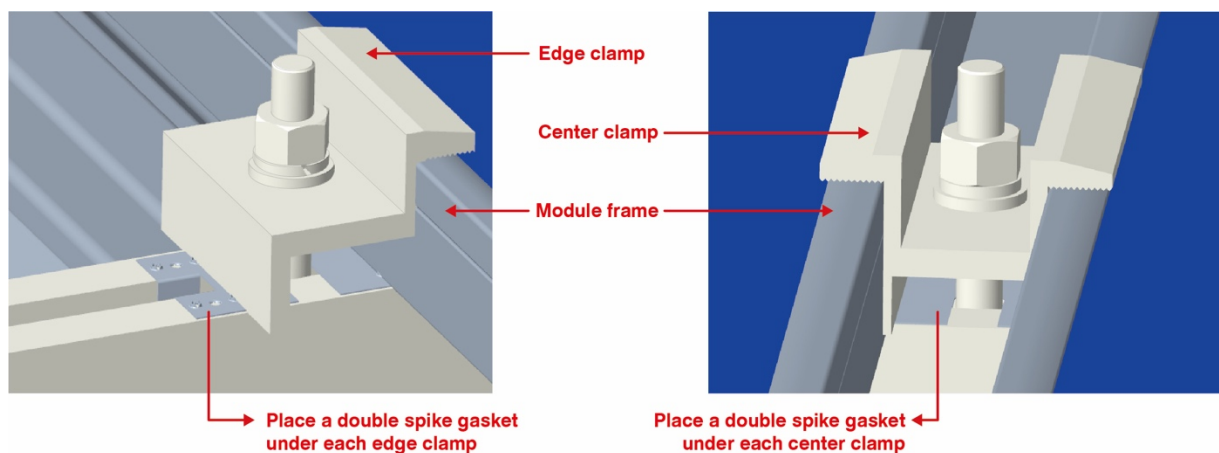


Step 11. After the 8 modules have been installed, the layout of a full group of 8x550W PV array is as follows.

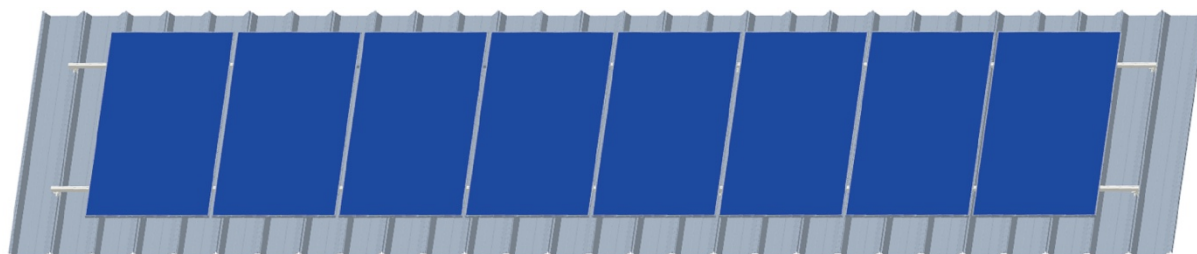

Step 12. External grounding measures for PV modules and brackets. After the PV modules and the metal parts of the brackets have been connected as one, connect to the grounding pole of the user's building to complete the grounding measures. Six M4x16 bolts (including ground puncture washers) are provided as packing accessories for the brackets for grounding connection of the modules. The grounding holes for the module are shown in the figure below.




Step 13. The installed grounding bolts are shown below.

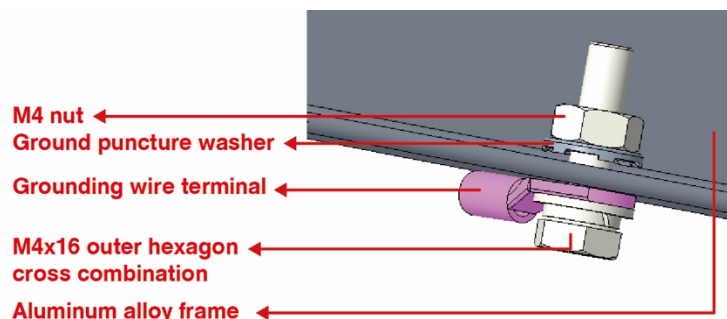


Note: The grounding wire and grounding copper lugs should be provided by construction personnel. The diameter of the grounding wire should be no less than 10mm². The color of the grounding wire should be yellow-green.

Step 14. The recommended grounding lead points for one group of 8x550W PV array are shown in the figure below:

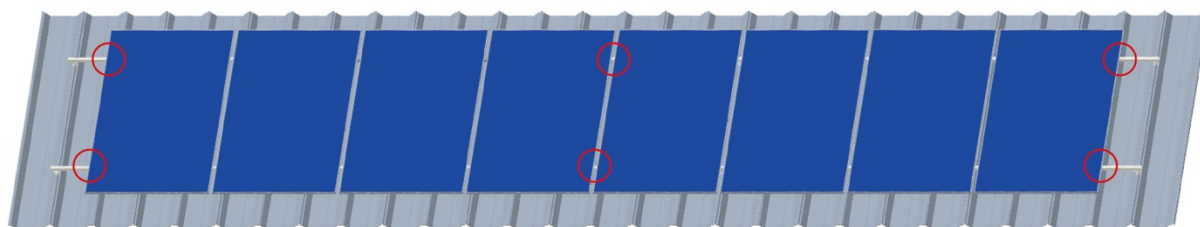


Appendix 3 – PV Module Rear Wiring Connection

The rear of the PV module has positive and negative lead wires containing MC4 connectors. Use an MC4 male connector for the positive terminal and an MC4 female connector for the negative terminal. See the figure below:

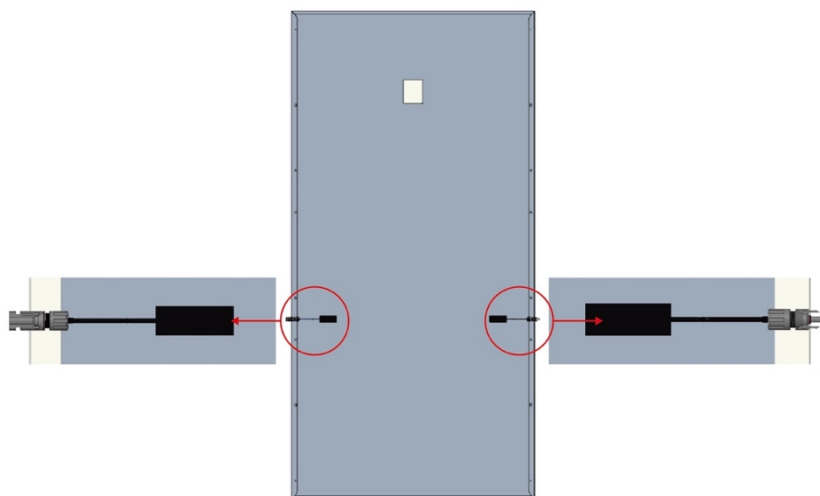


1. Connecting two PV modules. Two PV modules are connected together in series by means of the self-contained MC4 plug. As shown in the figure below.

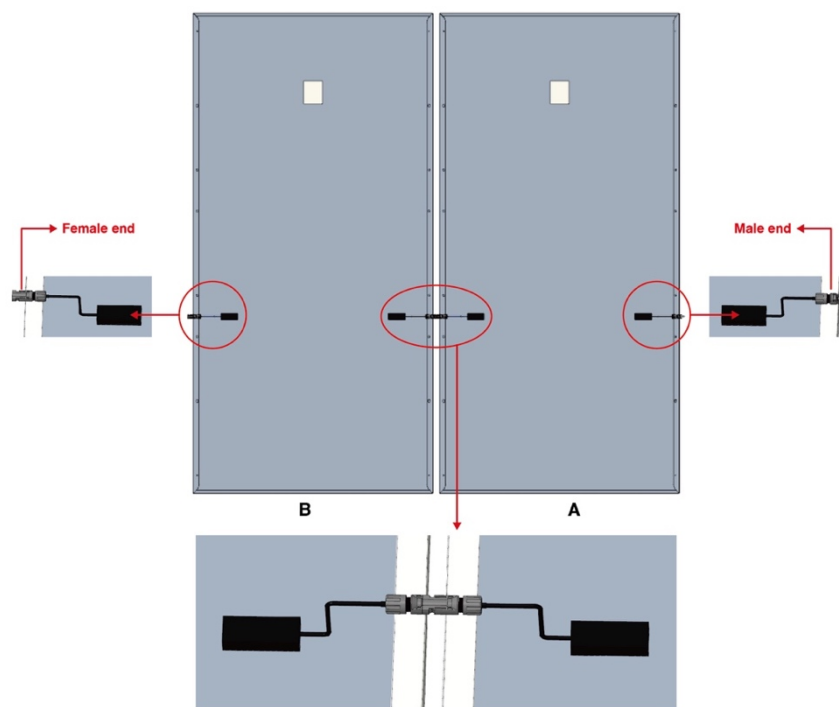













Wiring is as above, connecting the male and female end plugs of both modules creates a series connection. When connected, the male end of Module A is positive and the female end of Module B is negative.

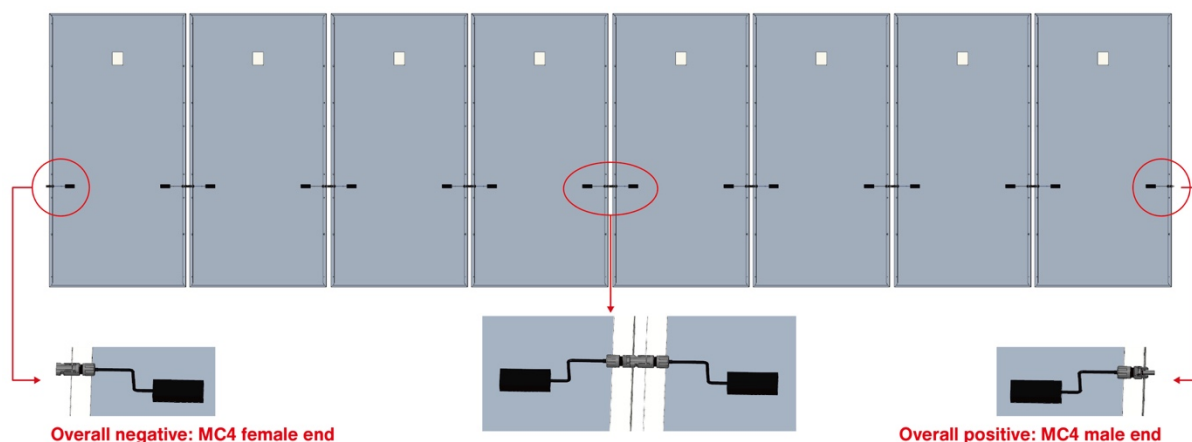2. Connect the male and female end plugs of the two modules in turn to connect the 8 modules in series. The positive pole of Module A is the MC4 male end, while the negative pole of Module B is the MC4 female end. The following figure shows the completed connection.



High Voltage Hazard: The open circuit voltage after connection in series is 398.56V.

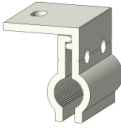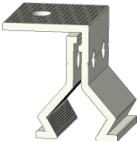Appendix 4 – Bracket Accessory List and Illustrations

No.	Name	Quantity		Picture
		5kW	10kW	
01	Guide rail	10	20	
02	Guide rail connector	8	16	
03	430 vertical type fixture	30	60	
04	760 angular type fixture	30	60	
05	M8x25 outer hexagon bolt	122	244	
06	M8x45 outer hexagon bolt	22	44	
07	Edge clamp	4	8	
08	Center clamp	14	28	
09	Double spike gasket	18	36	
10	M4x16 combination screw	6	12	
11	M4 stainless steel nut	6	12	
12	M4 ground puncture washer	6	12	

Guangdong Lesso Energy Storage Technology Co., LTD

Add: No. 3, Block G03-2-1, Daba Industrial Park, Longjiang Community Residential Committee,
Longjiang Town, Shunde District, Foshan City, Guangdong Province